



Deze download wordt u aangeboden door **Pick-upnaalden.nl**

Fazantendreef 17-19

8251 JR Dronten

T: 0321 769022

E: [info@pick-upnaalden.nl](mailto:info@pick-upnaalden.nl)

W: [www.pickupnaalden.com](http://www.pickupnaalden.com)

W: [www.pickupnaald.com](http://www.pickupnaald.com)

Facebook: [www.facebook.com/pickupnaalden](http://www.facebook.com/pickupnaalden)

Twitter: [twitter.com/Pickupnaalden](https://twitter.com/Pickupnaalden)

 
Google+ : [plus.google.com/114738445546162436900](https://plus.google.com/114738445546162436900)

## Contents

- 3 *Loosening the transport screws*
- 4 *Placement*
- 4 *Preparing the record player for use*
- 5 *Connections*
- 6 *Adjusting stylus pressure*
- 6 *Cleaning the stylus*

The Beogram 4500 is provided with screws on the base to protect the suspension during transport. These screws must be loosened before you can operate the record player.

Place the record player on a table so that the front protrudes over the edge. Hold the record player firmly and turn it carefully to locate and loosen each of the three screws. Turn the screws anti-clockwise (several turns) using a screwdriver or a coin. The screws cannot be removed from the holes.

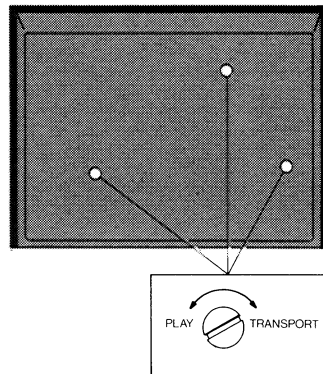


*Note: If you ever have to transport the record player, we strongly recommend that you tighten the transport screws beforehand.*

See the Beosystem 4500 user's guide for detailed operating instructions.

## Placement

 The Beogram 4500 must be placed horizontally on a stable surface. Allow a space of at least 25 cm above the record player so that the dust cover can open freely.

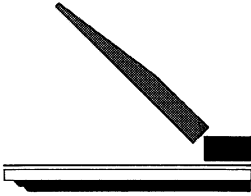


*Note: A special shelf, type no. 2012, is available as an optional accessory for hanging the Beogram 4500 on the wall.*

## Preparing the record player for use

 Remove the foam rubber pieces protecting the tonearm. Be careful not to catch the stylus.


Place the platter on the turntable and check that it can move freely. It should feel springy when pressed lightly.

***Do not raise the stylus guard on the cartridge until the record player is ready for use.***

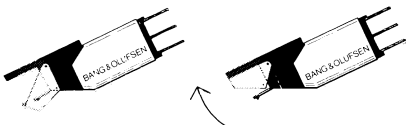

## Connections

 Once connected to the Beomaster 4500 and to the mains, the Beogram 4500 is in stand-by mode and ready to be operated. The record player is designed to be left in stand-by mode when not in use.

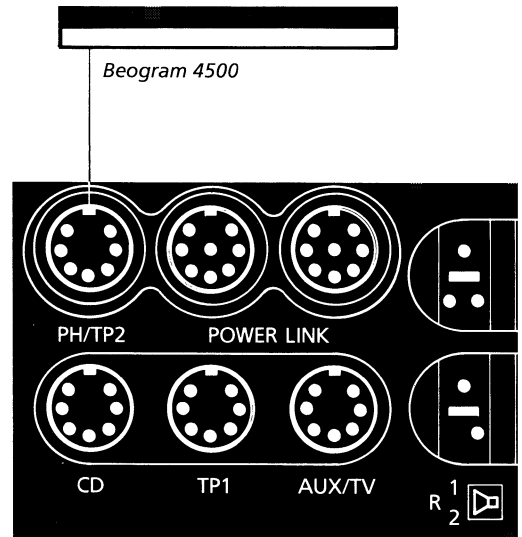


Beomaster 4500

## Adjusting stylus pressure

 The stylus pressure must be adjusted to match the type of Bang & Olufsen MMC cartridge fitted on the tonearm.

Set the slider situated on the right-hand side of the tonearm to the appropriate value:

MMC 1 = 1.0 g  
MMC 2 = 1.0 g  
MMC 3 = 1.2 g  
MMC 4 = 1.2 g  
MMC 5 = 1.5 g

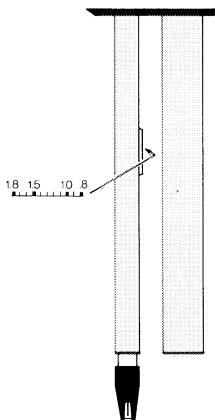

*If you want to check the stylus pressure using a stylus gauge, place the gauge underneath the stylus and lower the tonearm onto the gauge by pressing → for more than two seconds. The pressure can now be read off from the gauge.*

## Cleaning the stylus

Using the tiny brush provided, carefully brush the stylus from the back of the cartridge towards the front. Any stylus cleaning fluid should be used in moderate amounts.

## International guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature

*This Beogram fulfils the conditions stated in the EEC directive 82/499 concerning radio frequency interference.*

## Special note for the UK market

### IMPORTANT

*The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:*

*Blue: Neutral*

*Brown: Live*

*As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your unit, proceed as follows:*

*The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.*

*The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

*Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.*