



Deze download wordt u gratis aangeboden door Pick-upnaalden.nl

Web : www.pickupnaalden.com
Email : info@pick-upnaalden.nl
Facebook : www.facebook.com/pickupnaalden
Twitter : twitter.com/Pickupnaalden
Google+ : https://plus.google.com/+FCaris_pickupnaalden

CAUTION

1. Some printed circuit boards are not supplied as the assembled. To separate these in this service manual, the stock No's are not indicated at the ends of the board names. However, the individual parts on the circuit boards are provided by orders.
2. Since some of capacitors and resistors are omitted from parts lists in this service manual, refer to the Common Parts List for capacitors & resistors, which was issued on February 1983.
3. Abbreviations in this service manual are as follows.

 
•Abbreviations List

C.R.	: Carbon Resistor	E.B.	: Bi-Polar Electrolytic Capacitor
S.R.	: Solid Resistor		
Ce.R.	: Cement Resistor	E.B.L.	: Low Leak Bi-Polar Electrolytic Capacitor
M.R.	: Metal Film Resistor	Ta.C.	: Tantalum Capacitor
F.R.	: Fusing Resistor	F.C.	: Film Capacitor
N.I.R.	: Non-Inflammable Resistor	M.P.	: Metalized Paper Capacitor
A.R.	: Array Resistor	P.C.	: Polystyrene Capacitor
C.C.	: Ceramic Capacitor	G.C.	: Gimmic Capacitor
C.T.	: Ceramic Capacitor, Temoerature Compensation	A.C.	: Array Capacitor
E.C.	: Electrolytic Capacitor	V.R.	: Variable Resistor
E.L.	: Low Leak Electrolytic Capacitor	S.V.R.	: Semi Variable Resistor
		SW.	: Switch

1. PARTS LOCATION & PARTS LIST

1-1. S-0121 Motor Control Circuit Board

Component Side

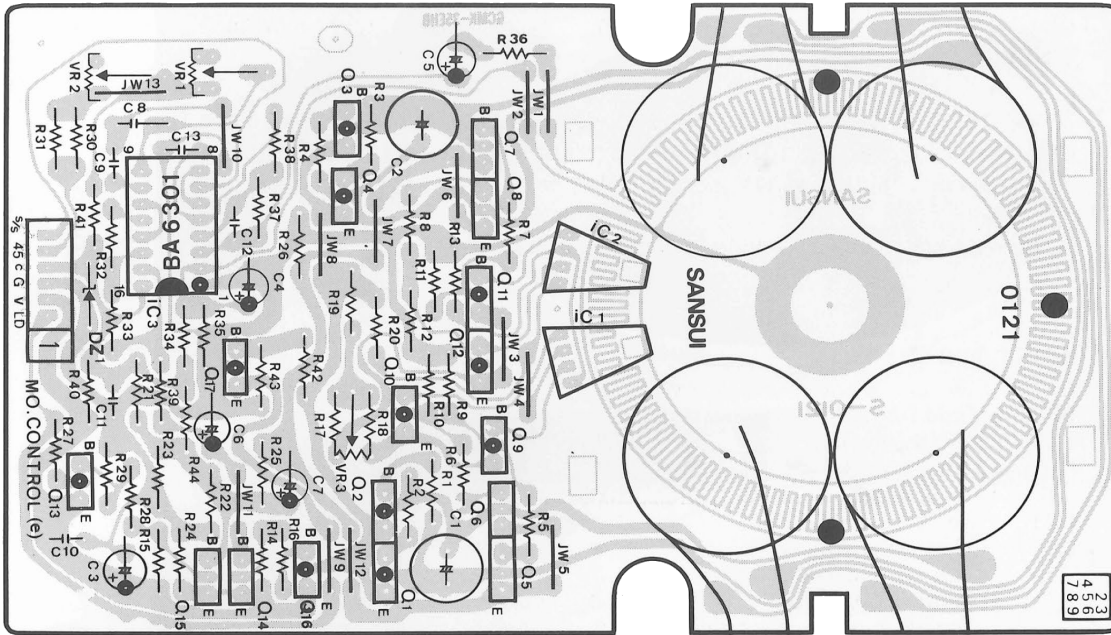

Parts List

Parts No.	Stock No.	Description
•Transistor		
eQ1	46359701	2SA952
eQ2	46359701	2SA952
eQ3	46359701	2SA952
eQ4	46359701	2SA952
eQ5	46359801	2SC2001
eQ6	46359801	2SC2001
eQ7	46359801	2SC2001
eQ8	46359801	2SC2001
eQ9	46367401	2SA733A
	or 46367001	2SA1115
	or 46367201	2SA1048
eQ10	46367401	2SA733A
	or 46367001	2SA1115
	or 46367201	2SA1048
eQ11	46367401	2SA733A
	or 46367001	2SA1115
	or 46367201	2SA1048
eQ12	46367401	2SA733A
	or 46367001	2SA1115
	or 46367201	2SA1048

Parts List


Parts No.	Stock No.	Description
eQ13	46367401	2SA733A
	or 46367001	2SA1115
	or 46367201	2SA1048
eQ14	46367501	2SC945A
	or 46367101	2SC2603
	or 46367301	2SC2458
eQ15	46367501	2SC945A
	or 46367101	2SC2603
	or 46367301	2SC2458
eQ16	46614001	2SA1283
eQ17	46367402	2SA733A
	or 46367001	2SA1115
	or 46367201	2SA1048
•IC		
eIC1	46354301	H-300BC
	or 46354302	H-300BC
eIC2	46354301	H-300BC
	or 46354302	H-300BC
eIC3	46354400	BA6301

Parts List

Parts No.	Stock No.	Description
•Zener Diode		
eDZ1	46113900	05Z12-Y
eR41	46639000	240kΩ 1/4W M.R.
eC1	08451100	22μF 16V E.B.
eC2	08451100	22μF 16V E.B.
eVR1	46366600	100kΩ (B) S.V.R., speed adj.
eVR2	07241700	200kΩ (B) S.V.R., speed adj. 45 rpm
eVR3	07241000	1kΩ (B) S.V.R., wow & flutter adj.

1-2. S-0189 Speed SW. Circuit Board

 Component Side

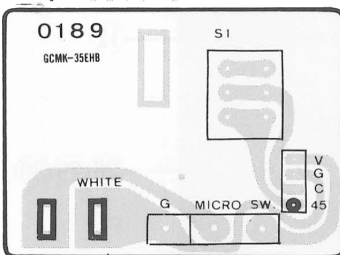

Parts List


Parts No.	Stock No.	Description
gSW1	46368500	Push SW., SPEED

2. OTHER PARTS


2-1. Front View



 2-2. Top View

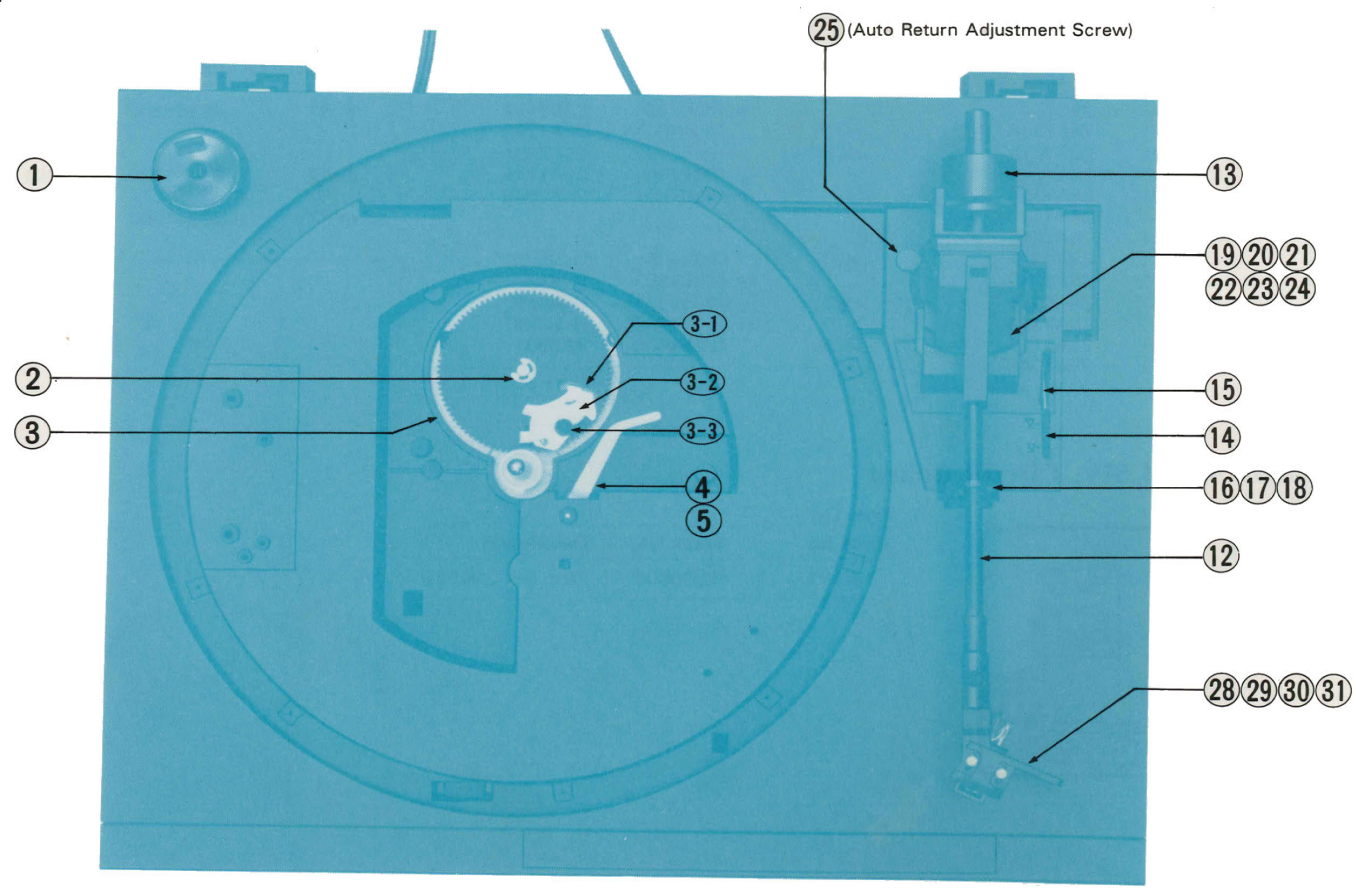

2-3. Bottom View

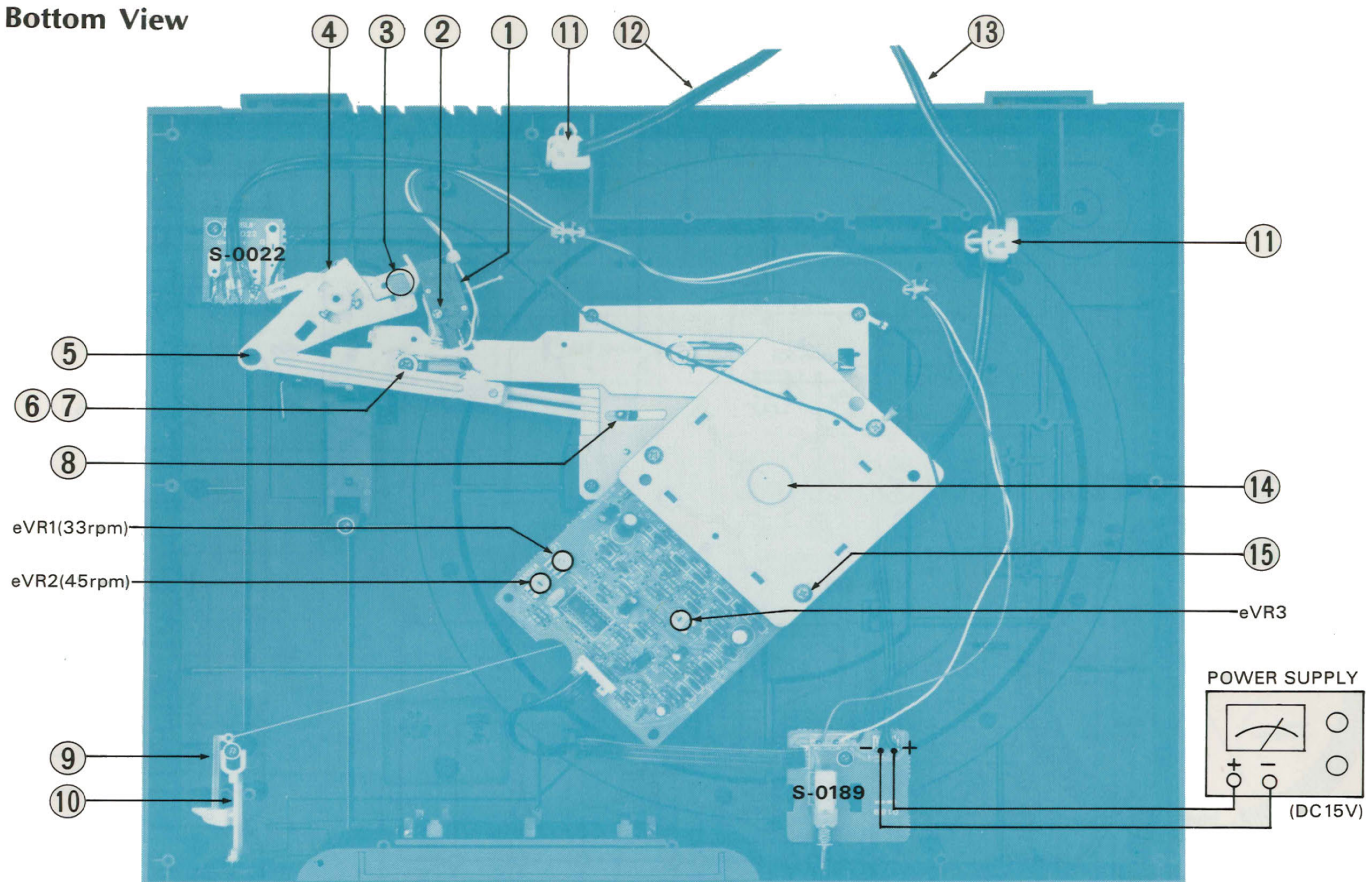 

Parts List < Front View/Top View >

Parts No.	Stock No.	Description
1	13012300	45 r.p.m Adaptor
2	00489400	E Ring 5 ϕ m main gear
3	13017200	Main Gear
3-1	—	Lower Trip
3-2	—	Upper Trip
3-3	51822900	CS Type Washer, 3 ϕ
4	13136400	Reject Arm
5	13143400	Tension Spring, reject arm
6	46368500	Push SW., SPEED
7	47393200	Push Knob, SPEED
8	13234800	Indicator Case Cover
9	13235000	Indicator Plate
10	13164300	Indicator Holder
11	13142100	Push Knob, CUT (Silver Model)
	13142200	Push Knob, CUT (Black Model)
12	13176300	Tone Arm Ass'y
13	13176700	Main Weight Ass'y
14	13013500	Lifter Knob
15	13138300	Lifter Lever Ass'y
16	13138700	Arm Rest
17	13138500	Fook, arm rest
18	13167700	Binding Head Tapping Screw, M2 $\times$ 5
19	13138200	Lifter Plate
20	13035600	Spring, 5.3 ϕ $\times$ 10 mm (C)
21	13035700	Spring, 9.3 ϕ $\times$ 14 mm (E)
22	00466500	P Type Washer 3 ϕ $\times$ 10
23	13011600	Elevation Chip
24	13038010	Binding Head Tapping Screw M3 $\times$ 16
25	50624800	Cap for auto return adjustment
26	13140800	Turntable Sheet
27	13147210	Turntable Platter
28	13176600	Head Sheel Ass'y
29	13198200	Cartridge, SC-80
30	13198100	Stylus, SN-80
31	51921500	Screw Ass'y

Parts List < Bottom View >

Parts No.	Stock No.	Description
1	11602500	Micro Switch
2	13143710	Screw, micro switch
3	13038010	Pan Head Tapping Screw M3 $\times$ 16 (Adjusting Screw)
4	69034400	Spring, PU Plate
5	13143000	Push Pin
6	13038210	Screw, Slide arm
7	00467100	P Type Washer 5 ϕ $\times$ 10 $\times$ 1.0
8	13051900	Steel Ball 5 ϕ
9	13136700	Reject Lever (3)
10	13038300	Reject Lever (1)
11	07254700	Strain Relief
12	13234400	PU Output Cord
13	13234300	DC Power Cord
14	18028700	SSD703A DD Motor Ass'y with control circuit board (S-0121)
15	08320700	Brazier Head Tapping Screw M4 $\times$ 12
	13153500	Insulator

5. SCHEMATIC DIAGRAM

*Design and specifications subject to change without notice for improvement.

*La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.

*Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.

