




Deze download wordt u gratis aangeboden door Pick-upnaalden.nl

Web : www.pickupnaalden.com
Email : info@pick-upnaalden.nl
Facebook : www.facebook.com/pickupnaalden
Twitter : twitter.com/Pickupnaalden
Google+ : https://plus.google.com/+FCaris_pickupnaalden

PS-LX51

SERVICE MANUAL

E Model

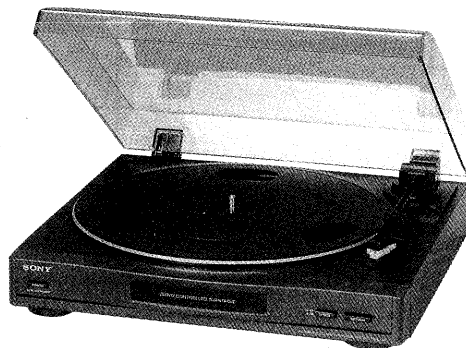

SPECIFICATIONS


Turntable	
Platter	30cm (12 in.)
Motor	DC servo motor
Drive system	Belt drive
Speed	33 1/3 rpm/45 rpm switchable
Wow and flutter	0.2% (WRMS)
Signal-to-noise ratio	60 dB (DIN-B)
Automatic system	Return, reject
Tonearm	
Type	Dynamically balanced
Pivot-to-stylus length	203 mm (8 in.)
Overall arm length	235 mm (9 1/4 in.)
Cartridge	
Type	Moving magnet type
Frequency response	20 Hz-20kHz
Stylus	CN-234
General	
Dimensions	355 × 94 × 345 mm(w/h/d) (14 × 3 3/4 × 13 3/4 inches)
Weight	Approx. 2.5 kg (5 lb 8 oz)
Power requirement	AEP, Italian, Germany model: 220-230 V AC, 50/60 Hz PX, Tourist, E, Saudi Arabia model: 110-120 V/220-240V AC, Adjustable with the voltage selector, 50/60 Hz Australia model 12V DC
Power consumption	2 W
Accessory supplied	45-rpm adaptor (1)
Optional accessories	Replacement stylus CN-234 Stat spray XP-C10 Cleaner XP-C1, XP-C2

Design and specifications subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

REPLACING THE STYLUS

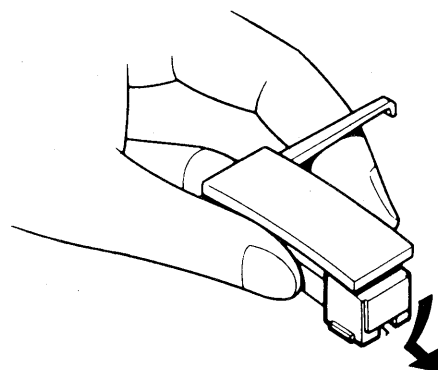


Replace the stylus after about 400 hours of use because using a worn stylus will damage records. An CN-234 replacement stylus is available at your Sony dealer.

Be sure to turn the amplifier off before proceeding with replacement.

- 1 While holding the cartridge, detach the stylus assembly as illustrated.
- 2 Insert the new stylus into the cartridge.


STEREO TURNTABLE SYSTEM
SONY®

LOCATION OF CONTROLS

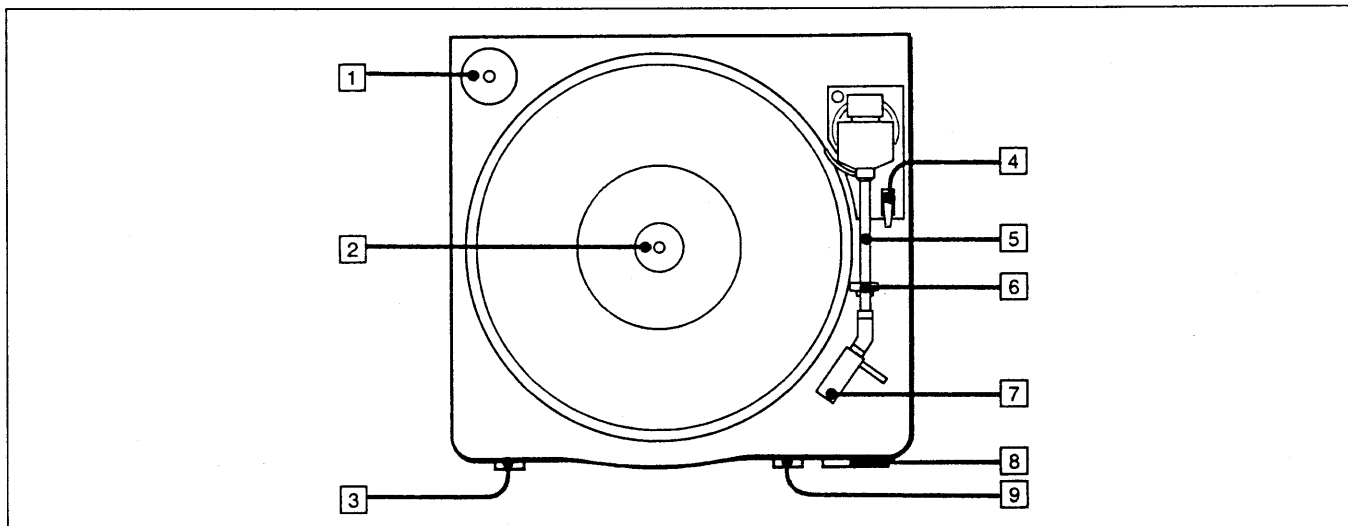


- 1** 45-rpm adaptor
- 2** Center spindle
- 3** POWER switch
- 4** Cueing lever
- 5** Tonearm
- 6** Arm rest
- 7** Cartridge
- 8** REJECT button
- 9** Speed selector

TURNTABLE ASSEMBLY

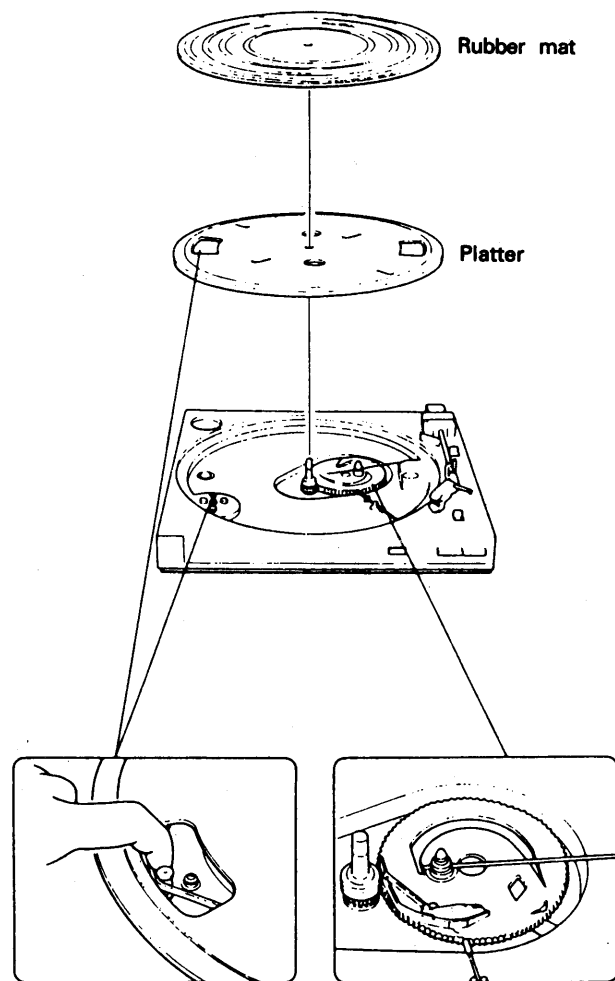

Hook the belt on the motor pulley.
If the belt is removed from the platter, replace it with the glossy side outward.

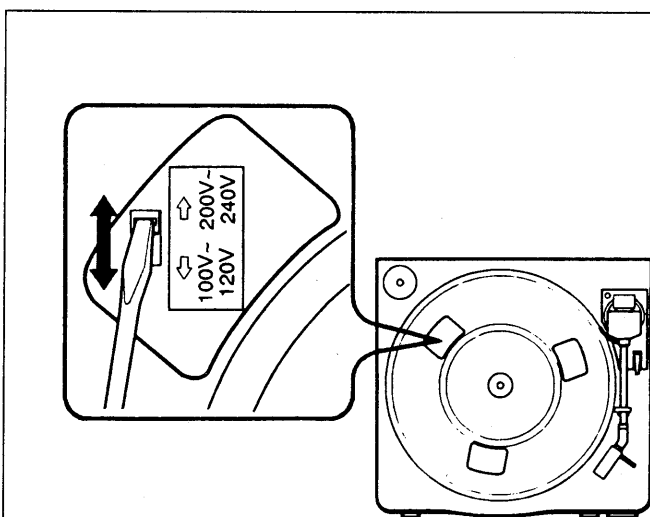

Setting the Voltage Selector

(E model)


For customers of the model equipped with the voltage selector

Check to confirm that the voltage selector is set to the local power line voltage. If not, set the voltage selector to the correct position before connecting the AC power cord to a wall outlet.

Speed Adjustment


Note: Be sure to perform 45rpm adjustment before 33rpm.

1. Place a stroboscope board on the turntable sheet.
2. Set the SPEED switch to 45.
Press the START button.
Adjust VR2 so that the striped pattern of stroboscope board is stationary.
3. Set the SPEED switch to 33.
Adjust VR1 in the same way.

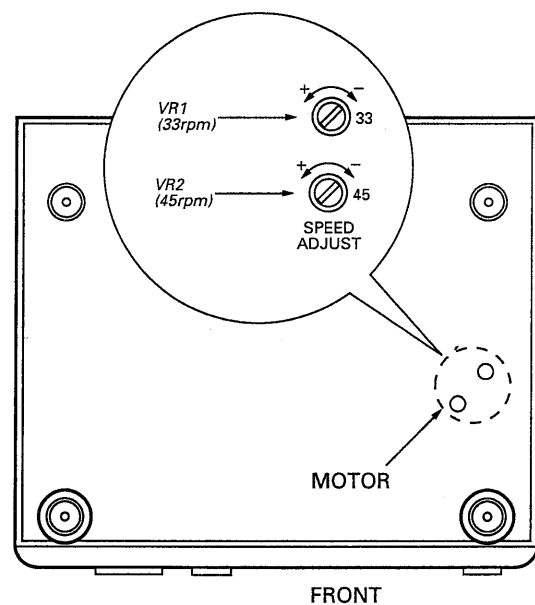

PS-LX51

SCHEMATIC DIAGRAM

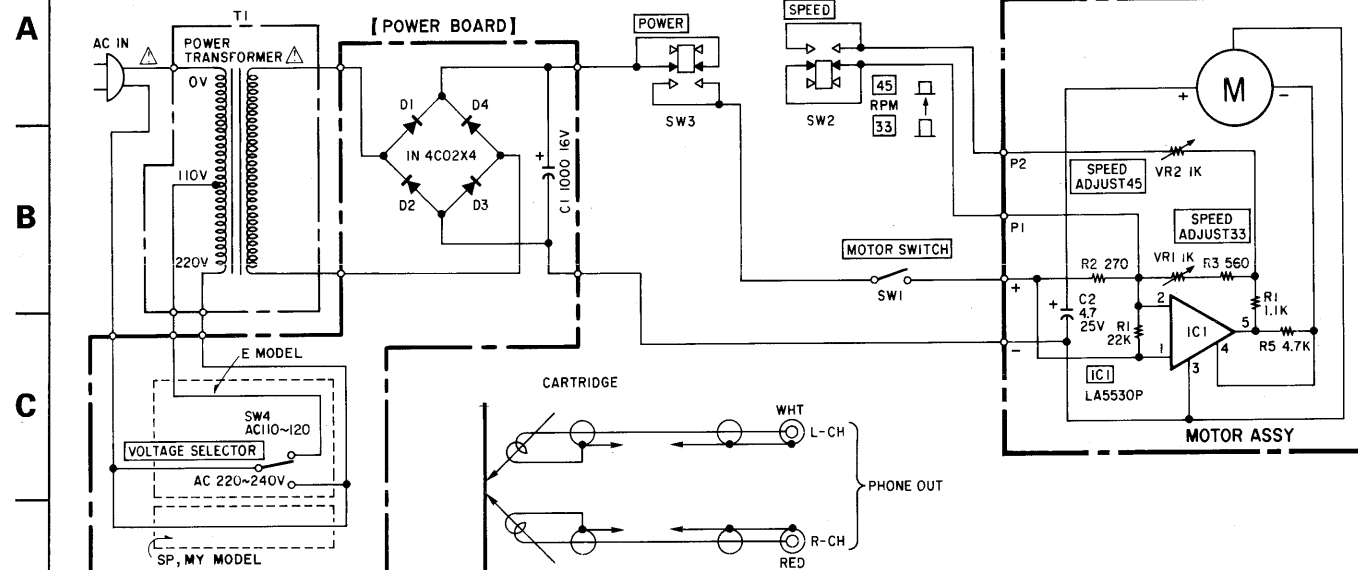

NOTE:


- All capacitors are in μF unless otherwise noted. pF : μF 50V or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- SP: Singapore MY: Malaysia

• Switches:

Ref.No.	Switch	Position
SW1	MOTOR	OFF
SW2	SPEED	33
SW3	POWER	OFF

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

WIRING DIAGRAM

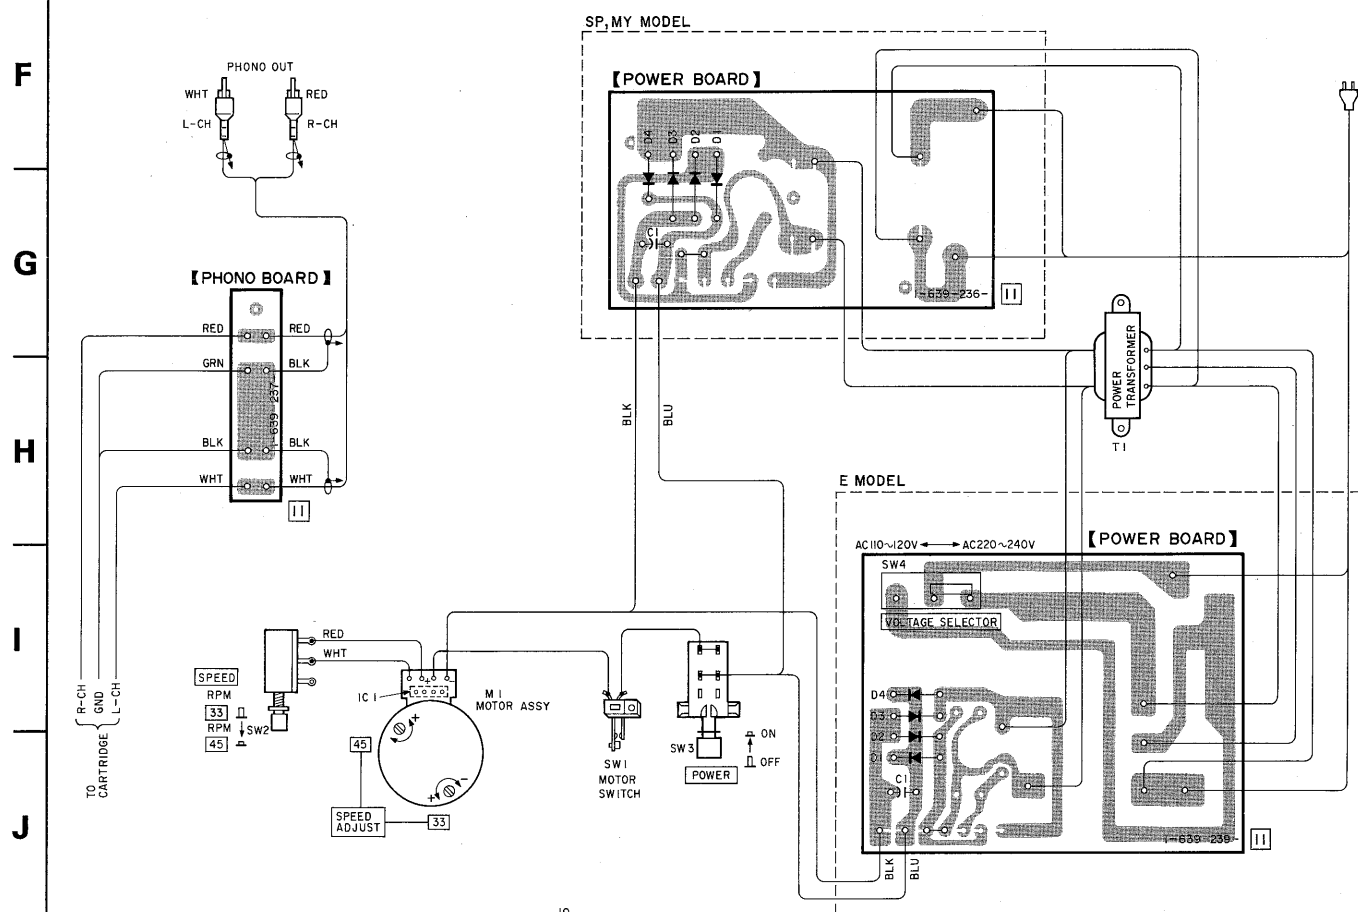


EXPLODED VIEW

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
 - The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - The mechanical parts with no reference number in the exploded views are not supplied.
- Screw(# mark) list is given in the last of this parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

- Abbreviation
SP : Singapore Model
MY : Malaysia Model

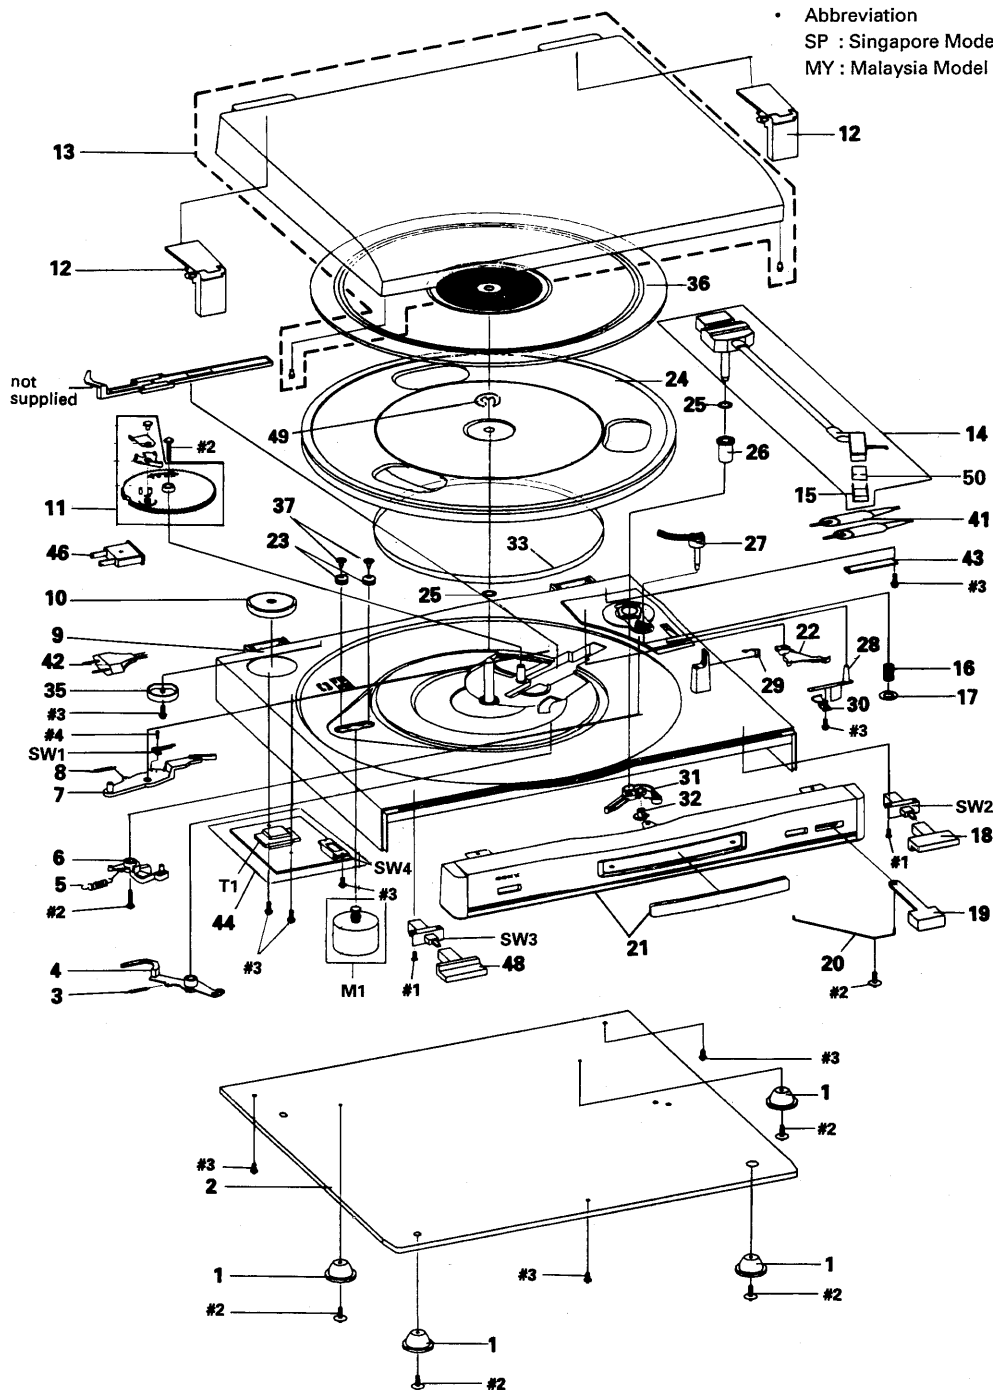

Ref.No.	Part No.	Description	Remarks	Ref.No.	Part No.	Description	Remarks
1	4-955-842-01	FOOT-RUBBER		6	4-950-454-01	ELEVATOR	
* 2	4-953-061-01	COVER-BOTTOM		7	4-950-463-01	ARM-CONTROL	
3	4-950-453-01	SPRING-REJECT		8	4-950-464-01	SPRING-CONTROL ARM	
4	4-950-452-01	LEVER-REJECT		* 9	4-950-431-01	CABINET-UPPER	
5	4-950-455-01	SPRING-ELEVATOR					

Ref.No.	Part No.	Description	Remarks	Ref.No.	Part No.	Description	Remarks
10	4-950-467-01	ADAPTOR-45RPM		31	4-950-450-01	ARM-FEED	
11	A-4660-140-A	GEAR ASSY, RING		32	4-950-451-01	CAM-ADJUST	
12	4-950-432-01	HINGE		33	4-950-434-01	BELT	
13	A-4660-138-A	COVER ASSY, DUST		* 35	4-950-514-01	WASHER CODE	
14	A-4660-139-A	ARM ASSY, TONE		36	A-4660-142-A	RUBBER ASSY, SHEET	
15	4-951-290-01	STYLUS (CN-234)		37	4-950-469-01	SCREW-SETTING MOTOR	
16	4-950-442-01	SPRING-ELEVATION		38	1-572-746-11	SWITCH, LEAF (SW1) (MOTOR)	
17	4-950-444-01	WASHER-C/S		39	1-572-744-11	SWITCH, PUSH (2 KEY) (SPEED)	
18	4-950-445-01	BUTTON-SPEED		△40	1-572-744-11	SWITCH, PUSH (SW3) (POWER)	
19	4-950-447-01	BUTTON-REJECT		41	1-590-871-11	CORD, CONNECTION (3 CORE)	
20	4-950-448-01	LINK-REJECT		△42	1-558-943-11	CORD, POWER (E)	
21	A-4660-374-A	PANEL ASSY, FRONT		△42	1-558-944-11	CORD, POWER (SP, MY)	
22	A-4660-141-A	MOTOR ASSY		43	1-639-237-11	PHONE BOARD	
23	4-950-470-01	CUSHION-MOTOR		△44	1-639-239-11	POWER BOARD (E)	
24	4-950-433-01	PLATTER		△44	1-639-236-11	POWER BOARD (SP, MY)	
25	4-950-435-01	SPACER		△45	1-450-508-11	TRANSFORMER, POWER	
26	4-950-436-01	BUSHING-TONE ARM		△46	1-693-159-11	ADAPTER, AC (E)	
27	4-950-437-01	ARM-ELEVATION		△47	1-572-745-11	VOLTAGE SELECTOR (SW4) (E)	
28	4-950-440-01	LEVER-CUEING		48	4-950-513-01	BUTTON POWER	
29	4-950-439-01	LOCKER-ARM		49	4-953-059-01	E RING	
30	4-950-441-01	BRACKET-CUEING		50	1-251-028-11	CARTRIDGE (MAIN)	

ELECTRICAL PARTS LIST

NOTE:

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

- XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms
METAL : Metal-film resistor
METAL OXIDE : Metal Oxide-film resistor
F : nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS
In each case, u : μ, for example :
uA...: μA..., uPA...: μPA...,
uPB...: μPB..., uPC...: μPC...,
uPD...: μPD...
- CAPACITORS
MF : μF, PF : μμF
- COILS
MMH : mH, uH : μH
- Abbreviation
SP : Singapore MY : Malaysia

Ref.No.	Part No.	Description	Remarks	Ref.No.	Part No.	Description	Remarks
		MISCELLANEOUS *****				ACCESSORIES & PACKING MATERIALS *****	
38	1-572-746-11	SWITCH, LEAF (SW1) (MOTOR)		*	4-950-496-01	SNOW BOX (L)	
39	1-572-744-11	SWITCH, PUSH (2 KEY) (SW2) (SPEED)		*	4-950-503-01	SNOW BOX (R)	
△40	1-572-744-11	SWITCH, PUSH (SW3) (POWER)		*	4-956-070-01	INDIVIDUAL CARTON	
41	1-590-871-11	CORD, CONNECTION (3 CORE)			3-756-169-51	MANUAL, INSTRUCTION (English, French, Spanish, Chinese)	
△42	1-558-943-11	CORD, POWER (E)				*****	
△42	1-558-944-11	CORD, POWER (SP, MY)				HARDWARE LIST	
△44	1-639-236-11	POWER BOARD (SP, MY)		#1	7-685-246-19	SCREW +KTP 3X8 TYPE2 NON-SLIT	
△44	1-639-239-11	POWER BOARD (E)		#2	7-685-903-21	SCREW +PTPWH 3X8 TYPE2	
△45	1-450-508-11	TRANSFORMER, POWER		#3	7-685-646-19	SCREW +BVTP 3X8 TYPE2 NON-SLIT	
△47	1-572-745-11	VOLTAGE SELECTOR (SW4) (E)		#4	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT	

Sony Corporation

Audio Group

- 6 -

English

93B197017-1

Printed in Singapore

© 1993.2

9-957-696-11

Published by Audio Corporate Planning Group